LOCATOR® Restorative Components

BONE LEVEL IMPLANTS

RC Bone Level LOCATOR Abutments Restorative platform Ø 4.1 or Ø 4.8

022.4501

022.4502

022.4503

022.4504

022.4505

022.4506

Article Number		Article	
NC Bone Level LOCATOR Abutments			
Restorative platform Ø 3.3			
022.2502		NC LOCATOR, H 2.0 mm	
022.2503		NC LOCATOR, H 3.0 mm	
022.2504		NC LOCATOR, H 4.0 mm	
022.2505		NC LOCATOR, H 5.0 mm	
022.2506		NC LOCATOR, H 6.0 mm	

RC LOCATOR, H 1.0 mm

RC LOCATOR, H 2.0 mm

RC LOCATOR, H 3.0 mm

RC LOCATOR, H 4.0 mm

RC LOCATOR, H 5.0 mm

RC LOCATOR, H 6.0 mm

TISSUE LEVEL IMPLANTS

Article Number		Article	
RN Tissue Level LOCATOR Abutments			
Restorative platform Ø 4.8			
048.175		RN LOCATOR, H 1.0 mm	
048.176		RN LOCATOR, H 2.0 mm	
048.177		RN LOCATOR, H 3.0 mm	
048.178		RN LOCATOR, H 4.0 mm	
048.179		RN LOCATOR, H 50 mm	
048.180		RN LOCATOR, H 6.0 mm	

WN Tissue Level LOCATOR Abutments			
Restorative platform Ø 6.5			
048.183	¢	WN LOCATOR, H 1.0 mm	
048.184		WN LOCATOR, H 2.0 mm	
048.185		WN LOCATOR, H 3.0 mm	
048.186		WN LOCATOR, H 4.0 mm	
048.187		WN LOCATOR, H 5.0 mm	

NNC Tissue Level LOCATOR Abutments			
Restorative platform Ø 3.5			
045.581		NNC LOCATOR, H 1.0 mm	
045.582		NNC LOCATOR, H 2.0 mm	
045.583		NNC LOCATOR, H 3.0 mm	
045.584		NNC LOCATOR, H 4.0 mm	
045.585		NNC LOCATOR, H 5.0 mm	
045.586		NNC LOCATOR, H 6.0 mm	

TIP: To determine correct locator cuff height, we recommend measuring from the top of the implant to the highest point of tissue (rounding up).

H = Height NNC = Narrow Neck Crossfit® RN = Regular Neck WN = Wide Neck NC = Narrow Crossfit RC = Regular Crossfit



Additional components may be available.

For more information or to place an order, contact your local Straumann representative or Customer Service at 800/448 8168 (US) or 800/363 4024 (CA).

AUXILLARY TOOLS & PARTS

Article Number	Article		
046.415		LOCATOR Core Tool	
046.416	LOCATOR Driver, short for ratchet, L 15.0 mm		
046.417		LOCATOR Driver, Long for ratchet, L 21.0 mm	
048.199v4		LOCATOR parallel post	
048.200	•\ \ / /•	LOCATOR angle measurement guide	
046.414		LOCATOR Core Tool tip	

Article Number		Article	
Impression Components			
025.0120-04	0 \mathbf{D}	BL LOCATOR Female Analog	
048.198v4		TL LOCATOR Female Analog	
048.197v4	HE	LOCATOR Impression Coping	

"-04" "v4" = components come in packs of 4

Article Number		Article	Dimensions	Material	
Universal Male Processing Parts					
048.189V2	0	LOCATOR male processing package, contents: denture cap (\emptyset 5.5 mm, height 2.5 mm) with black processing male (height 1.9 mm), block-out spacer (048.196), white replacement male (048.190), pink replacement male (048.191), blue replacement male (048.192)		titanium/nylon	
048.190V4		LOCATOR replacement male, white, 0°–10°*, 5 lbs, 2.27 kg**	height 1.7 mm	nylon	
048.191V4		LOCATOR replacement male, pink, light retention, 0°–10°*, 3 lbs, 1.36 kg**	height 1.7 mm	nylon	
048.192V4		LOCATOR replacement male, blue, extra-light retention, 0°–10°*, 1.5 lbs, 0.68 kg**	height 1.7 mm	nylon	
048.182V2		LOCATOR male processing package, extended range, contents: denture cap (Ø 5.5 mm, height 2.5 mm) with black processing male (height 1.9 mm), block-out spacer (048.196), green replacement male (048.193), orange replacement male (048.188), red replacement male (048.194)		titanium/nylon	
048.193V4		LOCATOR replacement male, green, extended range, 10°–20°*, 3–4 lbs, 1.36–1.82 kg**	height 1.7 mm	nylon	
048.188V4		LOCATOR replacement male, orange, light retenti- on, extended range, 10°–20°*, 2 lbs, 0.91 kg**	height 1.7 mm	nylon	
048.194V4		LOCATOR replacement male, red, extra-light retention, extended range, 10°–20°*, 0.5–1.5 lbs, 0.23–0.68 kg**	height 1.7 mm	nylon	
048.181V4		LOCATOR replacement male, grey, extra-light retention, extended range, 0 lbs.	height 1.7 mm	nylon	
048.218V4	8	LOCATOR processing spacer		POM	
046.413V4	8	LOCATOR abutment holder sleeve		PSU	

* = For the correction of angle divergences ** = Retention force