





### Facility Drills

- :: Available in surgical steel;
- :: Instrument sequence for surgical alveolus in Facility Implants.

Initial	TwistØ 2.0	10 mm	12 mm	14 mm
103.330	103.331	103.341	103.342	103.343



### Facility Height Measurer

- :: Available in titanium;
- :: For selection of prosthetic abutments;
- :: Marks corresponding to transmucosa heights.

128.027



### Facility Connection

- :: For driver 105.104 maximum 35 N.cm;
- :: For driver 105.109 maximum 45 N.cm.

Contra-angle

105.104

Torque Wrench

105.109



### Manual Implant Driver

- :: Available in surgical steel;
- :: Compatible with all Neodent Implant lines contra-angle drivers, it becomes a manual driver for implant placement.

Contra-angle

104.028

Wrench

104.005



### Facility Bone Tap

- :: Suitable for the formation of threads in surgical socket before placing Facility implants in bone bed type I or II.

111.035



### Facility Bone Tap Connection

:: Suitable for manual installation using Torque Wrench.

105.111




### Drill Extension

:: Available in surgical steel;  
:: Fit the drill directly into the Drill Extension.

103.426



### Facility X-Ray Positioner

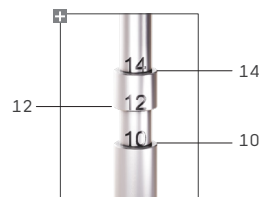

129.016



### Implant Removal

:: Available in surgical steel.

130.052

### Facility Abutment Placement Aid

:: Insertion of Facility prosthetic components through impact.

104.056



### Torque Wrench

:: Available in surgical steel;  
:: Fitting for square connections;  
:: Collapsible wrench that allows for proper assembly cleaning.

104.050



### Screwdrivers

:: Please note the screwdriver that matches the screw in the prosthetic abutment;  
:: To control the torque, the screwdriver should be adapted to a Torque Wrench (104.050);  
:: For manual torque, the screwdriver should be adapted to a Manual Driver (104.005).



### Drivers for Contra-angle

:: Available in surgical steel;  
:: Please note the screwdriver that matches the screw in the prosthetic abutment.

